



WWW.FLYELITE.COM

ELITE Simulation Solutions
672 N Semoran Blvd., Ste. 104
Orlando, FL 32807

Phone: (407) 277-7700 • FAX: (407) 277-7623

ELITE™

AP-3000

Avionics Panel Installation

(ADDENDUM)



ELITE™
Simulation Solutions

Congratulations on your purchase of the new AP-3000 (digital readout) Avionics Panel. This guide is an addendum to the **ELITE Hardware Installation Manual** and will provide the necessary information for proper set up of the AP-3000.

IMPORTANT

The AP-3000 comes with its own special **Power Supply**. Using a different power supply will cause unpredictable results and may damage the AP-3000.

- The AP-3000 Power Supply should only be used to power the AP-3000 by itself. Do NOT use AP-3000 Power Supply to power other components.
- Connect AP-3000 as shown in the diagrams on the opposite page or in the **ELITE Hardware Installation Manual**.
- Refer to the **ELITE Hardware Installation Manual** for information on connecting UCI Box and other system components as applicable.


NOTE:

The AP-3000 is designed to be similar in operation and function to common avionics stacks found in actual aircraft. With few exceptions, its use should be intuitive and integrate easily with any system. A few functions unique to the AP-3000 are the **AUX 1 & AUX 2** toggle switches (pictured below). **AUX 1** is an ON/OFF style switch that controls the display of the on-screen Moving Map. **AUX 2** is used for DME selection in the King Air.



AUX 1 & 2 toggle switches

Connecting the AP-3000

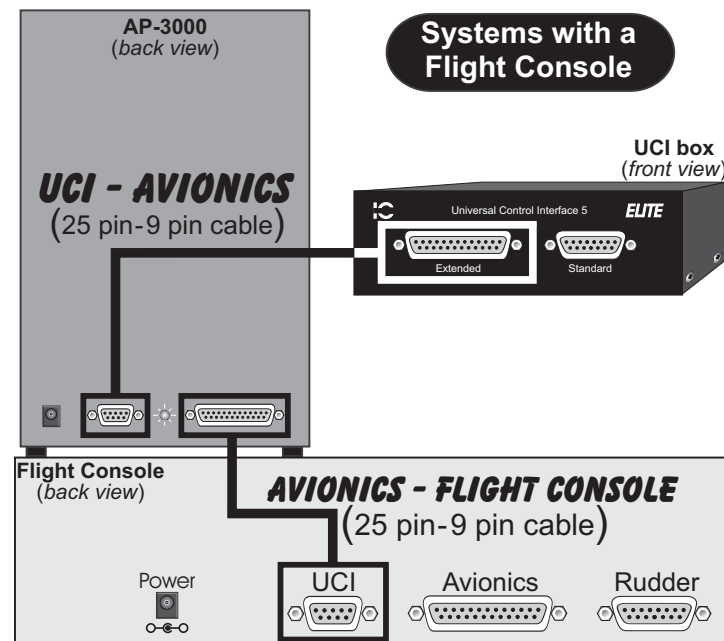

NOTE

External power and UCI / Computer connections not shown.

