

# Installation Instructions for ELITE USB Hardware Support

Before you continue with the installation of the USB Hardware and Software, please read the 'ELITE USB Hardware Installation Manual' located on [WWW.FLYELITE.COM](http://WWW.FLYELITE.COM)

## Install the different installers and patches in the following order:

1. Install ELITE USB Device Driver

### For ELITE Software Users

Make sure you have ELITE Pilot or PCATD v7.0, v7.0.1 or v7.0.2 or ELITE Jet v7.0 or v7.0.1 Software. If your version is older than v7.0 contact your dealer to purchase an upgrade to version 7.0 prior to installing these ELITE USB Device Drivers.

2. Install the corresponding patches for your ELITE Software to upgrade to version 7.0.4.
3. Install the 'ELITE USB Support Software for ELITE' for your ELITE Software.

Note: If you have a ELITE Pilot or PCATD **AND** a ELITE Jet, then you have to install both, the ELITE USB Support Software for Pilot / PCATD **AND** ELITE USB Support Software for Jet.

### For Microsoft FS2002 Users

4. To use any ELITE Hardware, you will need to install the 'ELITE Hardware Support for FS2002' drivers. Use the installer on this CD-Rom to install and/or to upgrade an existing version of the 'ELITE Hardware Support for FS2002' drivers.
5. Install the 'ELITE USB Support Software for FS2002'.